

If any Nydree Engineered Hardwood Flooring is to be stored at a warehouse for any length of time prior to delivery to the job-site, there are a few fundamental guidelines that must be followed. This will insure that the plank doesn't undergo any unwanted environmental stress that leads to bowing, crowning, twisting or cupping.

- The flooring must be stored in an enclosed and well-ventilated building. Never store flooring outdoors.
- Do not store flooring directly on warehouse floors. Keep flooring on skids.
- The storage area within the building should be clean and dry.
- Each pallet of Nydree Engineered Hardwood Flooring will arrive to the job site wrapped in a polyethylene bag and typically shrink-wrapped to maintain the flooring at its most desirable installation moisture content. If material needs to be inspected prior to flooring installation, carefully remove the shrink-wrap and lift off polybag. After inspecting, put polybag back over pallet of flooring and secure with tape until installation. **DO NOT REMOVE NYDREE ENGINEERED HARDWOOD FLOORING FROM THE POLYBAG UNTIL THE DAY OF INSTALLATION.** Flooring that has not been used within a day should be returned to the polybag until ready for installation. No acclimation time is needed or desired when installing flooring. Removing the polybag prior to installation could lead to plank distortion (bowing, crowning, twisting, cupping).
- Ideally the warehouse will be temperature and humidity controlled.  
Temperature range: 60-90 °F  
Relative Humidity range: 30-55% RH
- Do not store flooring outside in non-ventilated 18-wheel truck trailers. Extreme heat developed during the summer months could distort the flooring.
- Nydree Flooring, LLC can not be responsible for damage to flooring caused by improper storage.